


USER MANUAL

Specifications

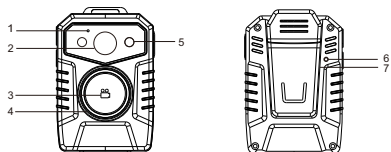

1. Microphone
2. Lens
3. Record Button
4. LED Ring
5. Infrared Light
6. Reset
7. Clip
8. USB Connector
9. Battery Level Indicator
10. Photographing/WiFi Button
11. FN Button
12. WiFi Indicator
13. Charging/GPS Indicator
14. Working Indicator
15. Docking Connector

RECORDING	
Video Resolution	Multiple Recording Resolution 2304x1296P(30 FPS)/ 1920x1080P(30 FPS)/ 1280x720P(30 FPS)/ 848x480(30 FPS)
Video Format	.Mp4
Recording Angle	Wide Angle 140 degrees
Audio	High Quality Built-in Microphone.
Pre-record	Support
Water Mark	User ID, Time and Date Stamp Embedded into Video.
Record LED	Front Button with LED Indicator
Video Duration	5 mins, 10 mins, 15 mins
Activation prompt	Vibrator & Speaker & LED Indicators
Photograph	
Camera	32M, 21M, 16M, 12M, 10M, 8M, 5M, 3M
Camera Format	JPEG
Snap Shot	Capture Photos During Video Recording
BATTERY	
Type	Built-in 3000mAh Lithium- (LiCoO2) (-20C° ~ 45C°)
Charging Time	180 minutes
Battery Indicator	Blue LED with 4 Levels (0~25%~50%~75%~100%)
OTHERS	
Storage Capacity	16G/32G/64G/128G
IR Light	2PCS 850nm Infrared LED with Wide Angle
Auto IR Control	Support
Night Vision	Up to 8 Meters
Waterproof	IP66
Clip	High Quality Metal Clip with 360° Rotation
Password Protection	Requires Password to Access to Video
Stealth Mode	Support (Turn off All LED Indicators and Sounds)
Dimensions	80 mm *56 mm *25mm (2.91" * 1.83" *0.93")
Weight	130 gram
Working Temperature	-20C° ~ 45C°
Storage temperature	-25C° ~ 50C°
ACCESSORIES	
Standard Accessories	USB cable, Charger, Driver CD, Single Dock, Clip

Overview

Police Body Camera is a video recording system that is typically utilized by law enforcement to record their interactions with the public, gather video evidence at crime scenes, and has been known to increase both officer and citizen accountability.

No screen display, 3000mAh big capacity Li-ion battery, available to be controlled via WiFi network, convenient drop-in dock charger and USB port which can also be used to upload data from camera. Front big-sized recording button and LED ring make this camera special and full of energy.

Prompt Sounds :

Start to record: 1 audio chirp.

Stop to record: 2 audio chirps.

Take a picture: 1 audio photographing chirp.

Turn on/off Wifi: 1 audio chirp.

Getting Started

1) Power on/off

Press and hold the "Recording" button located on the front of the device (under the camera lens, No. 3 on page 1) for about 3 seconds, the unit will emit ONE audio chirp and long vibration. A green indicator on top of the unit will turn on and remain green while the unit is powered on. And the green indicator will be off after the unit is powered off.

2) Video Recording:

To record a video, press the "Recording" button located on the front of the device (under the camera lens). The unit will emit 1 audio chirps and 1 vibration. A red working indicator on top of the unit and LED ring (No. 4) on the front of the device will turn on and remain red during recording. Double-press "Recording" button to stop recording with TWO audio chirps and vibrations. Video recording CAN NOT be stopped if the total recording time is less than 5 seconds. (The unit won't give any feedback if you stop recording video within 5 seconds.)

3) Taking Photo:

To take a photo, press the "Photographing/Wifi" button located on the right side of the device (No. 10 on page 1). The unit will emit 1 audio chirp and vibration. Red working indicator (No. 14) on top of the unit and LED ring will turn on, then turn off after shooting finished.

4) WiFi Switch:

To turn on WiFi, press and hold the "Photographing/WiFi" for 3 seconds.

When the WiFi is on, a white indicator on the top of unit will be on. To turn off WiFi, press and hold the "Photographing/WiFi" button for 3 seconds, then the white indicator will be off.

5) Charging:

Place the camera in the dock, then connect the dock to an electrical outlet using USB cable (included in the accessories). When the camera is being charged, the charging indicator(No. 13 on page 1) located on top of the unit will be blue. After fully charged, the charging indicator will be off.

6) Checking remaining battery:

The unit comes with 4 battery LED indicators(No. 9 on page 1). Short press the "FN" button(No.11 On page 1), Battery Level Indicator show the following information:
"All four blue indicators" means battery remains 75%-100%
"Three blue indicators" means battery remains 50%-75%
"Two blue indicators" means battery remains 25%-50%
"One blue indicator" means battery remains less than 25%
Short press "FN" button to turn off remaining battery indicators.

7) Stealth Mode

This camera support to record in stealth mode. Long press "FN" button, all indicators and IR light will be turned off and only vibration will work when you press any button under Stealth Mode.
Long press "FN" button to disable Stealth Mode.

8) Data Browsing and Management:

Place the camera in the dock, then connect the dock to PC using USB cable (included in the accessories), then use "Cam Manager.exe" in the CD disc.

9) How to Reset?

If you are having problems with your device, please try and reset the camera using the reset button(No. 9 on page 1).

Note: Use a paper clip or finger nail to press the reset button. You will hear a "click" after the button is pressed.

10) GPS function (Optional)

When the unit come with GPS module, GPS function can be activated by holding both "Photographing" button and "FN" button for 3 seconds. GPS yellow indicator will blink until signal received. Location coordinate will be embedded into video when yellow indicator is on.

Long press both "Photographing" button and "FN" button to disable GPS function.

Install WiFi APP

Scan QR code below, or search "WanCam" in APP store.




Android & IOS APP


Long press "Photographing/Wifi" button(No. 10 on page 1) to turn on the WiFi of camera, then open [WanCam](#).




Tap  to search your Wifi and connect.


Find out your body camera's WiFi SSID (Format: Camera-xxxx), then input WiFi password (default 12345678) and tap "ADD", to connect your body camera.

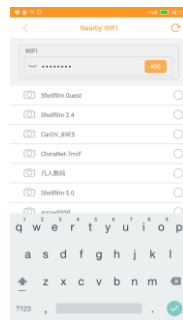


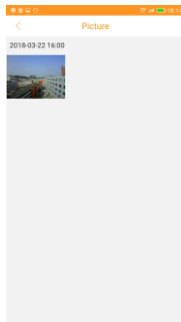
Tap  (Recorder Button) to record/stop recording video

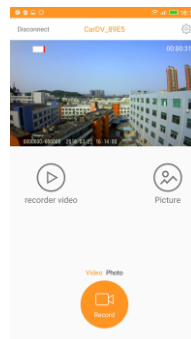


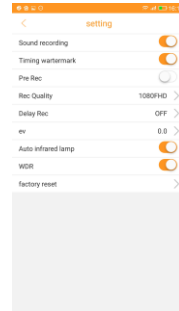
Tap  (recorder video button) to play back videos.

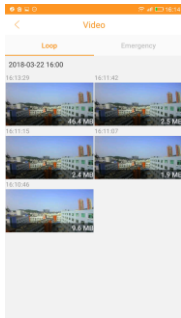

Tap  (Picture Button) to play back pictures.



Tap  to set up video quality, auto IR, delay recording, watermark etc.



Note: Files saved in camera are unable to be deleted in APP. The main function of APP is for reviewing video and changing some simple settings.

PC Software

Find Cammanager.exe in the CD disc, double click to open it.

Cam Manager

Login

Input Your Password: [masked] (Please Input 6 Digits or Capital Letters) Disconnect

Change Password

New password: [] (Please Input 6 Digits or Capital Letters) Apply

ID Info

Device ID: 1234567 (Please Input 7 Digits or Capital Letters)

User/Police ID: 123456 (Please Input 6 Digits or Capital Letters) Apply

Time

Device Time: 2018/03/28/11/04/35 Sync Date/Time

Unlock Memory Card

Unlock Memory Card

High

Resolution: 1080FHD Apply

Photo size: 32M Apply

Image Quality: Medium Apply

Loop video: off Apply

Length of Each Video: 15Mins Apply

Speaker Volume: High Apply

Reset

How to Login?

Default Password is 000000 (six zero).

After entering password, then click "Connect Device".

Login

Input Your Password: [masked] (Please Input 6 Digits or Capital Letters)

Connect Device

How to Change Password?

After login, input new password, then click "Apply" to Change password

Change Password

New password: [masked] (Please Input 6 Digits or Capital Letters)

Apply

How to Change ID?

Device ID is with 7 characters. While Police ID is with 6 characters. After setting, click "Apply" to finish.

ID Info

Device ID: 1234567 (Please Input 7 Digits or Capital Letters)

Apply

User/Police ID: 123456 (Please Input 6 Digits or Capital Letters)

Apply

Other Settings

Device time will be synchronized when user click "Sync Date&Time"

Time

Device Time: 2018/03/28/11/04/33

Sync Date/Time

How to Change Video Recording Parameters?

- 1) Select recording video resolution(from VGA to 1296FHD), then click Apply to finish.
- 2) Select on/off and click Apply to turn on/off Loop Video.
- 3) Select the length of each video(from 5 to 15 Mins), then click Apply to change each video saving time on memory card.

Resolution: 1080FHD	Apply	Photo size: 5M	Apply
Loop video: on	Apply	Length of Each Video: 15Mins	Apply

How to Change Photo Parameters?

- 1) Select photo resolution(from 3M to 32M), then click Apply to finish.
- 2) Select image quality(from low to high), then click Apply to finish.

Photo size: 5M	Apply	Image Quality: high	Apply
Length of Each Video: 15Mins	Apply	Speaker Volume: High	Apply

How to Set Volume Of Speaker?

Select volume grade(from off to high) then click Apply.

Speaker Volume: High	Apply
----------------------	-------

Unlock Memory Card

Click unlock memory card to view video and audio in U-Disk mode.

Unlock Memory Card	Unlock Memory Card
--------------------	--------------------